

Ambiente PS Utility Specifications

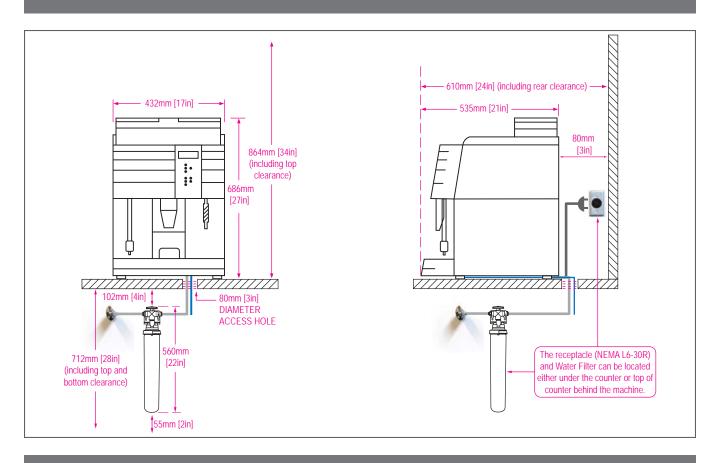

POWER, WATER SUPPLY, AND ACCESS REQUIREMENTS

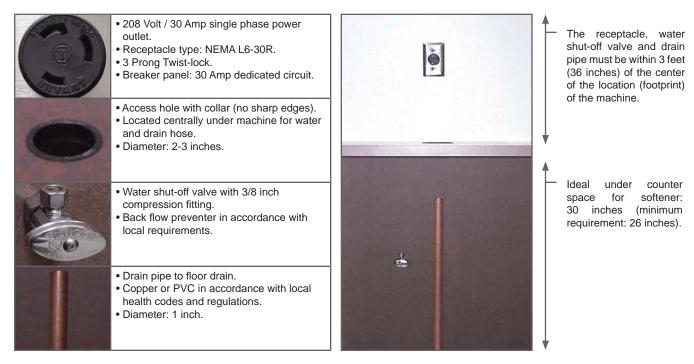

Notes: Access hole is only required if any of the utility hook-ups are located under the counter. Drain pipe is only necessary if the drain line from the drain tray is mounted fixed. A removable drain tray does not require a drain pipe since it will be emptied by the operator.

